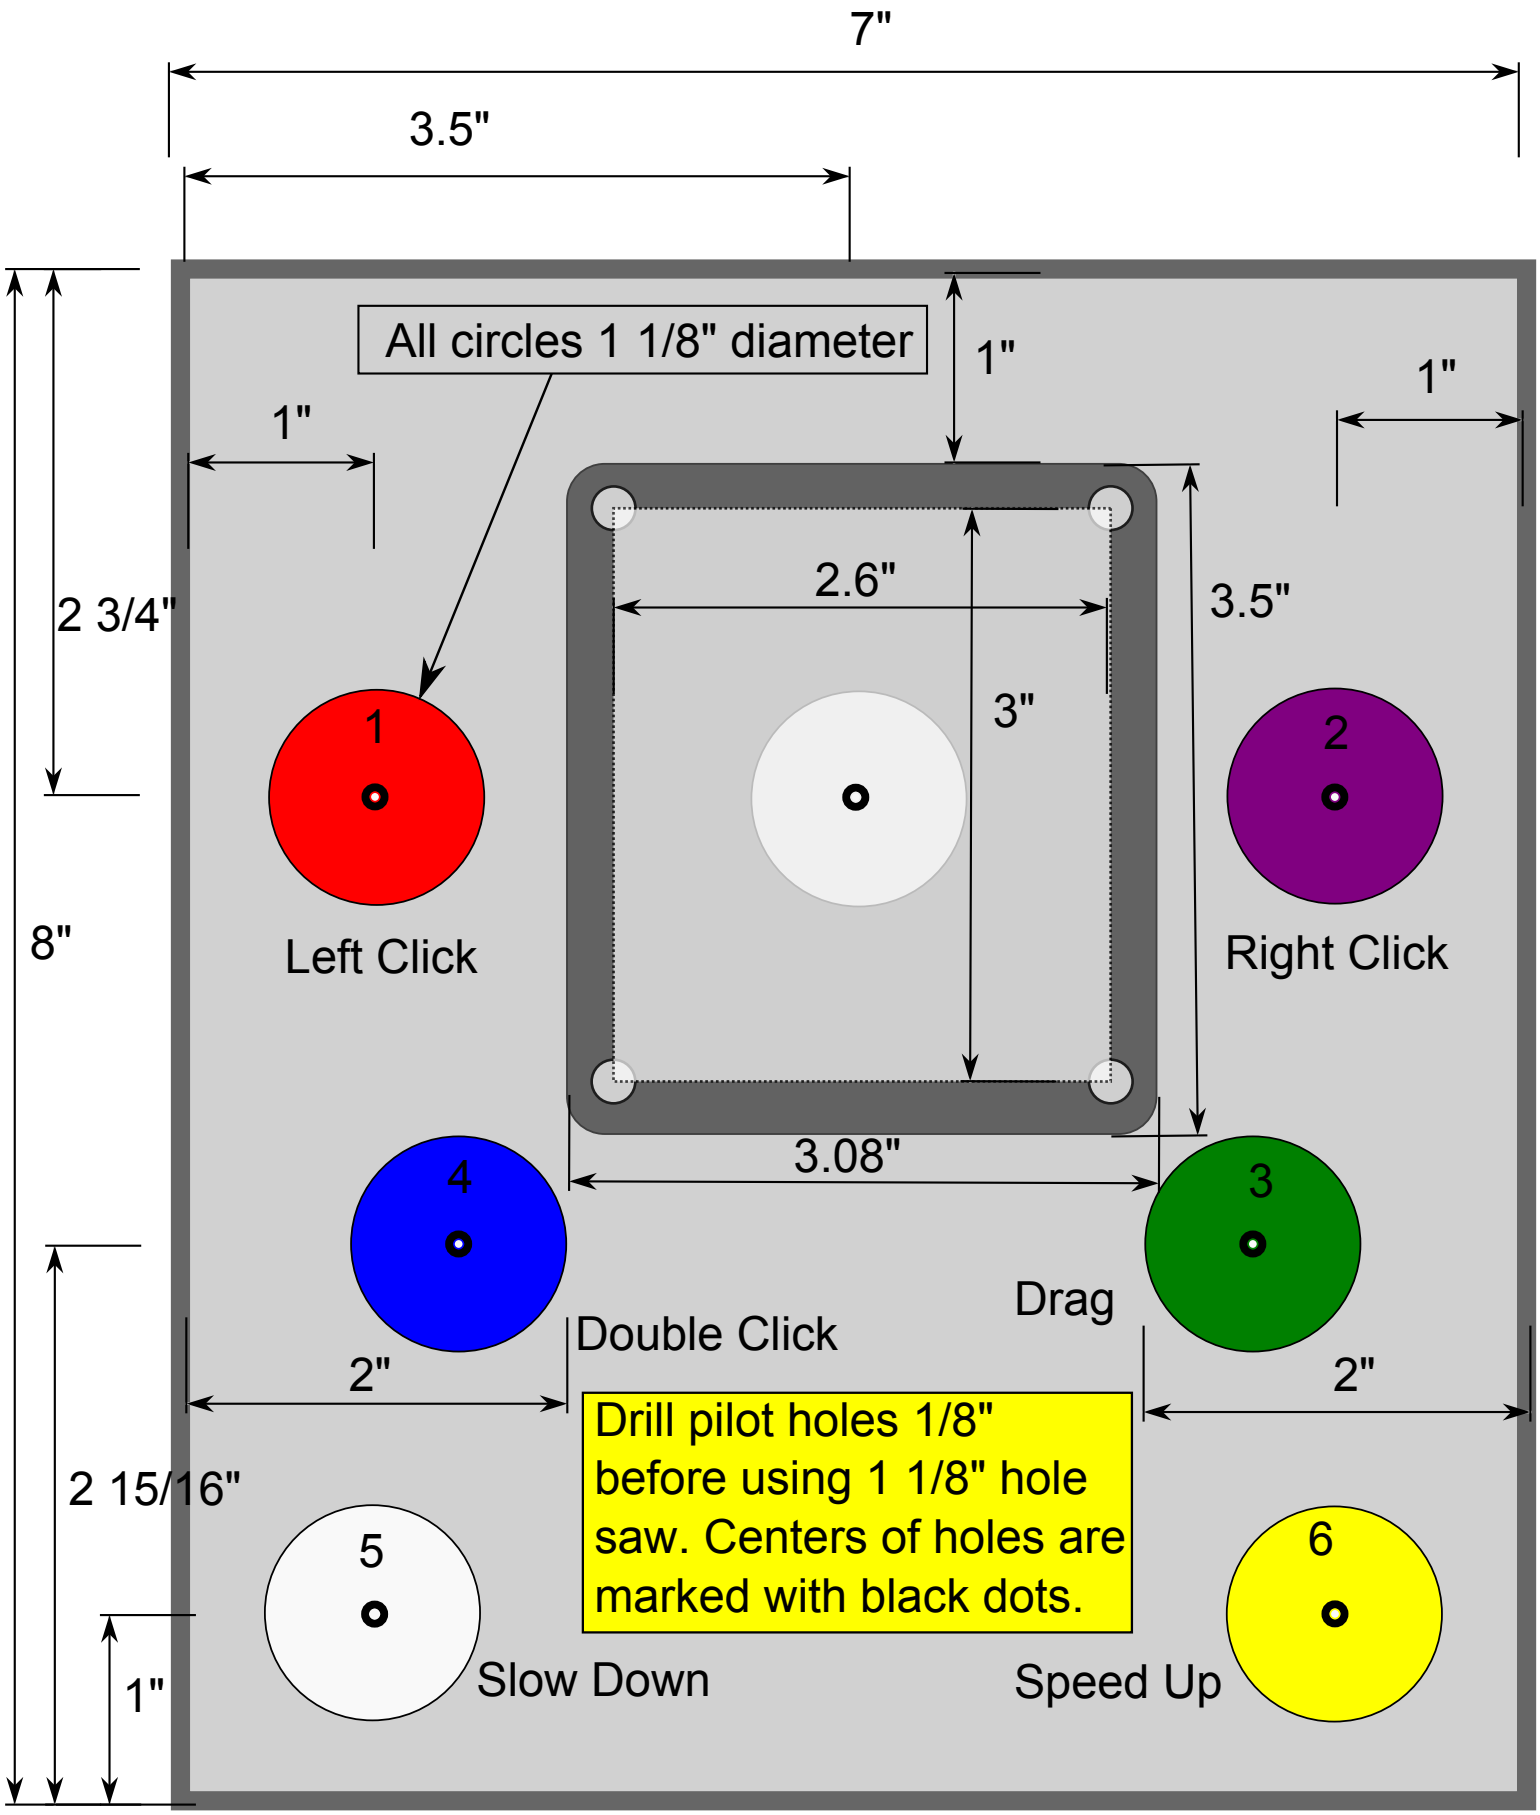
7"
3.5"
All circles 1 1/8" diameter
1"
1"
1"
2 3/4"
2.6"
3.5"
3"
1
2
8"
Left Click
Right Click
3.08"
4
3
Drag
Double Click
2"
2"
Drill pilot holes 1/8" before using 1 1/8" hole saw. Centers of holes are marked with black dots.
2 15/16"
5
6
1"
Slow Down
Speed Up