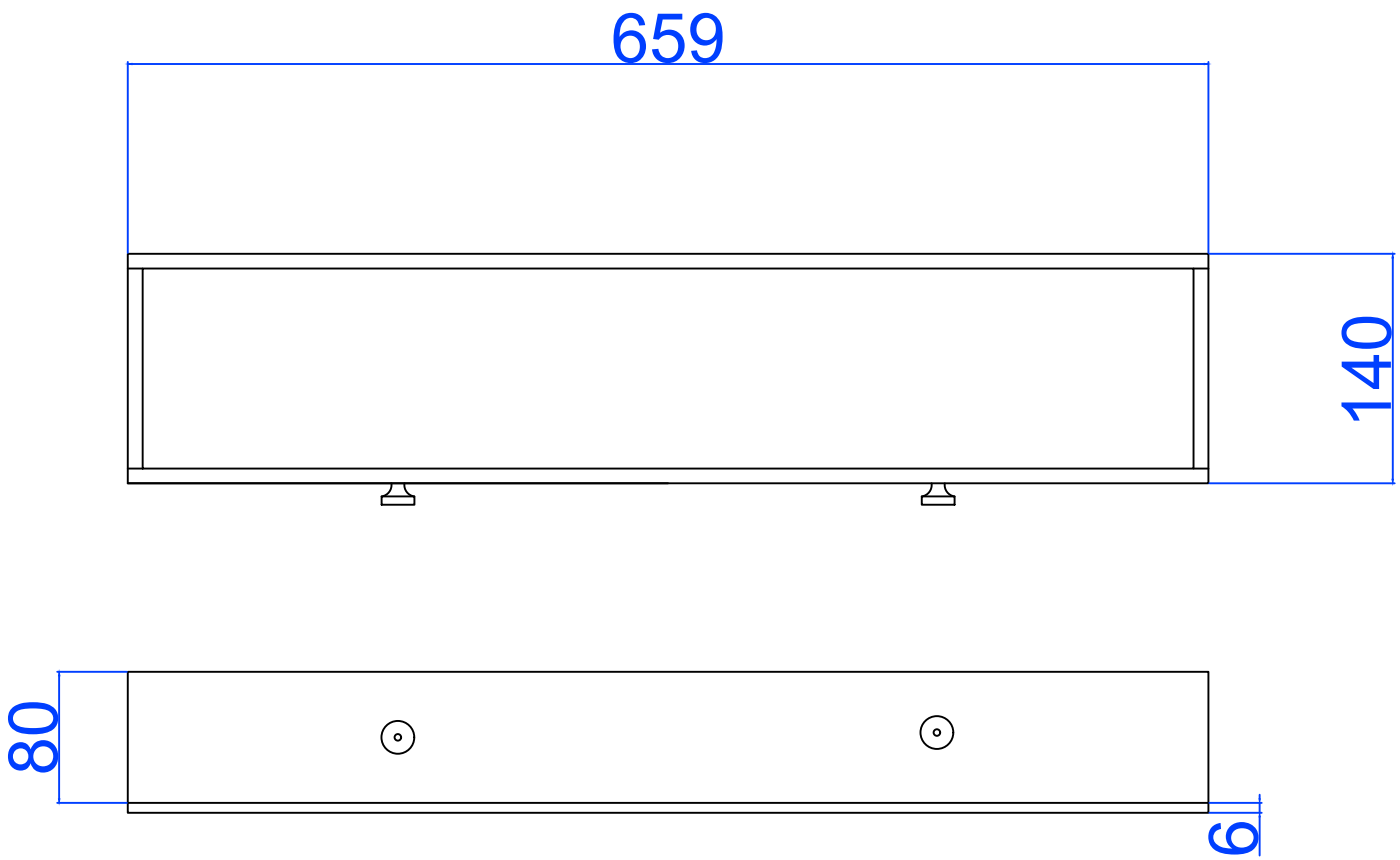

Till Detail

Exact width determined by interior width of finished frame

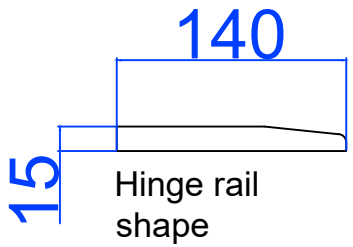

https://www.instructables.com/id/Beginning-Woodworking-Part-2-Fall-Front-Wooden-Too/